 



LAUTSPRECHERKABEL 2-ADRIG:

- SPEAKON → SPEAKON**
- PIN 1+ → PIN 1+: +LIFE**
- PIN 1- → PIN 1-: GROUND**
- PIN 2+ → N.C.**
- PIN 2- → N.C.**

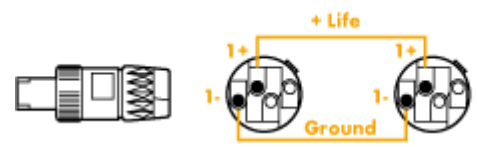

LAUTSPRECHERKABEL 4-ADRIG

 - SPEAKON → SPEAKON**
- PIN 1+ → PIN 1+: +LIFE CHANNEL 1**
- PIN 1- → PIN 1-: GROUND CHANNEL 1**
- PIN 2+ → PIN 2+: +LIFE CHANNEL 2**
- PIN 2- → PIN 2-: +GROUND CHANNEL 2**

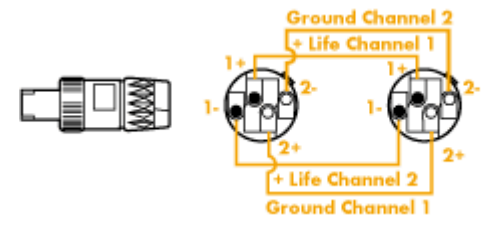

LAUTSPRECHERKABEL 4-ADRIG

- EP 4-POLIG → EP 4-POLIG**
- PIN 1 → PIN 1: +LIFE CHANNEL 1**
- PIN 2 → PIN 2: GROUND CHANNEL 1**
- PIN 3 → PIN 3: +LIFE CHANNEL 2**
- PIN 4 → PIN 4: GROUND CHANNEL 2**



 
LAUTSPRECHERKABEL 8-ADRIG

- EP 8-POLIG → EP 8-POLIG**
- PIN 1 → PIN 1: +LIFE CHANNEL 1**
- PIN 2 → PIN 2: GROUND CHANNEL 1**
- PIN 3 → PIN 3: +LIFE CHANNEL 2**
- PIN 4 → PIN 4: GROUND CHANNEL 2**
- PIN 5 → PIN 5: +LIFE CHANNEL 3**
- PIN 6 → PIN 6: GROUND CHANNEL 3**
- PIN 7 → PIN 7: +LIFE CHANNEL 4**
- PIN 8 → PIN 8: GROUND CHANNEL 4**




LAUTSPRECHERKABEL 2-ADRIG

- XLR → XLR**
- PIN 1 → PIN 1: GROUND**
- PIN 2 → PIN 2: +LIFE**
- PIN 3 → N.C.**

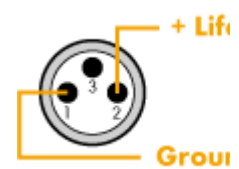


LAUTSPRECHER-ADAPTERKABEL 2-ADRIG

 - XLR → SPEAKON**
- PIN 1 → 1-: GROUND**
- PIN 2 → 1+: +LIFE**
- PIN 3 → 1+: N.C.**

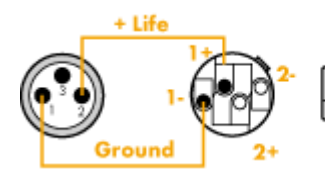

LAUTSPRECHER-ADAPTERKABEL 2-ADRIG

 - XLR → KLINKE MONO**
- PIN 1 → KLINKE GEHÄUSE: GROUND**
- PIN 2 → KLINKE SPITZE: +LIFE**

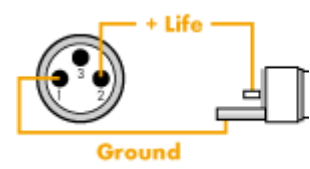

PIN
3 → N.C.

LAUTSPRECHERKABEL 2-ADRIG

KLINKE MONO → **KLINKE MONO**

KLINKE GEHÄUSE → **KLINKE GEHÄUSE: GROUND**

KLINKE SPITZE → **KLINKE SPITZE: +LIFE**

